


TOP VIEW


EA7HS-H5 (OMRON)



Dip Switch settings	
No:	Description:
1	Bliz On/Off
2	Buzzer On/Off
3	Upper parking On/Off
4	Lower parking On/Off
5	Drive in parking position On/Off

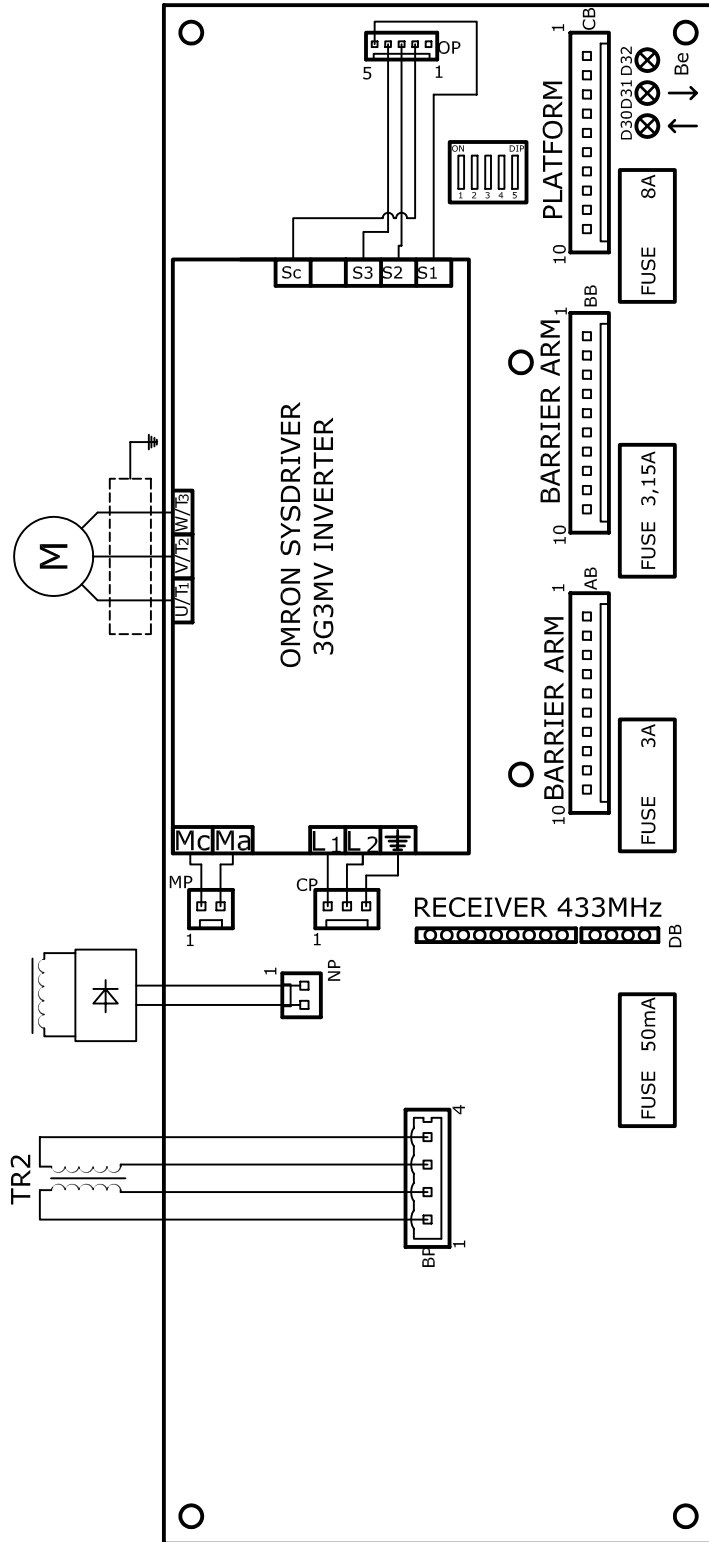

When you install Handi-Lifts type 7 delivered with remote control boxes or remote control only make sure that the main supply cable to the lift has jumped wire number 5 and 6

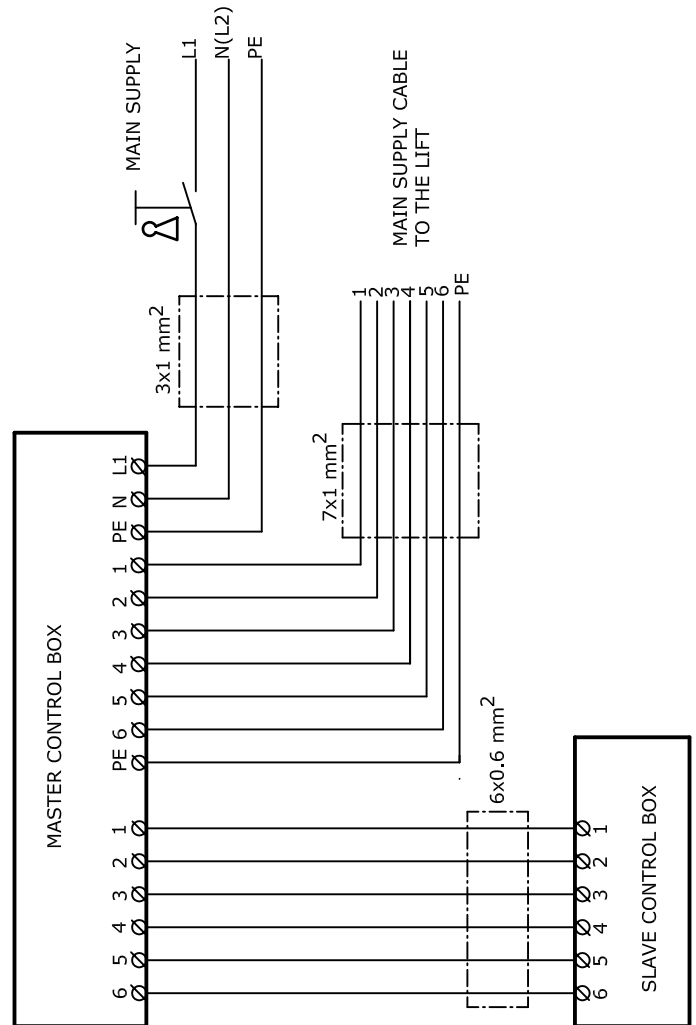

No:	Old No:	Description:
S1		Low speed
S2	NE	Lower Limit switch
S3	ØSE	Final Limit switch
S4	ØE	Upper Limit switch
S5		Low speed
S6	SE	Switch for overspeed governor
S7	KOE	Switch for Upper ramp

No:	Old No:	Description:
S8	ULE1	Lower platform plate switch
S9		Lower Platform switch
S10		Lower Platform switch
S11		Lower Platform switch
S12	KNE	Switch for lower ramp
S13	BE1	Lower Barrier arm switch
S14	BE2	Upper Barrier arm switch

No:	Old No:	Description:
S15	LE1	Lower Platform switch
S16	LE2	Upper Platform switch
S17		Switch for driving signal
S18		Rise/Lower switch 1
S19		Rise/Lower switch 2
S20		Joystick
S21		Emergency stop.
S22		Emergency Call

