



**PROGRAMMING GUIDE  
FOR CONTROL BOX  
ON HANDI-LIFT 6 / 7**

## **Table of contents**

1	Step by step	3
---	--------------	---



## 1 Step by step

### Program transmitter and receiver

This is used where receiver PCB is placed on the main print


UP

Press until the  
1<sup>st</sup>. led lit red.

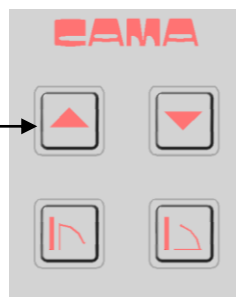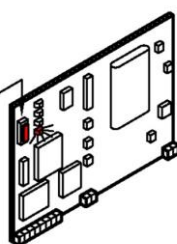



DOWN

Press again and the  
2<sup>nd</sup>. Led lit red.

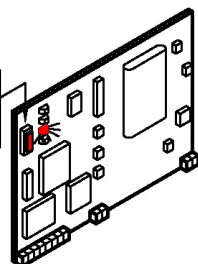


OPEN

Press again and the  
3<sup>rd</sup>. Led lit red.

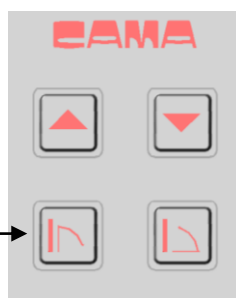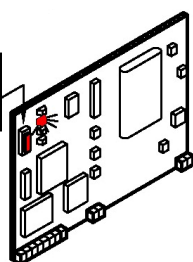

CLOSE

Press again and the  
4<sup>th</sup>. Led lit green.

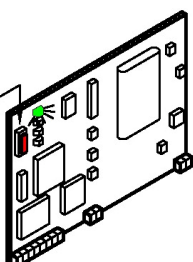

RESET: Press and hold until led no.: 1 lid red, release and press and hold until led no.: 3 and 4 flash