



TOP VIEW

EA7-H6 (Invertek)

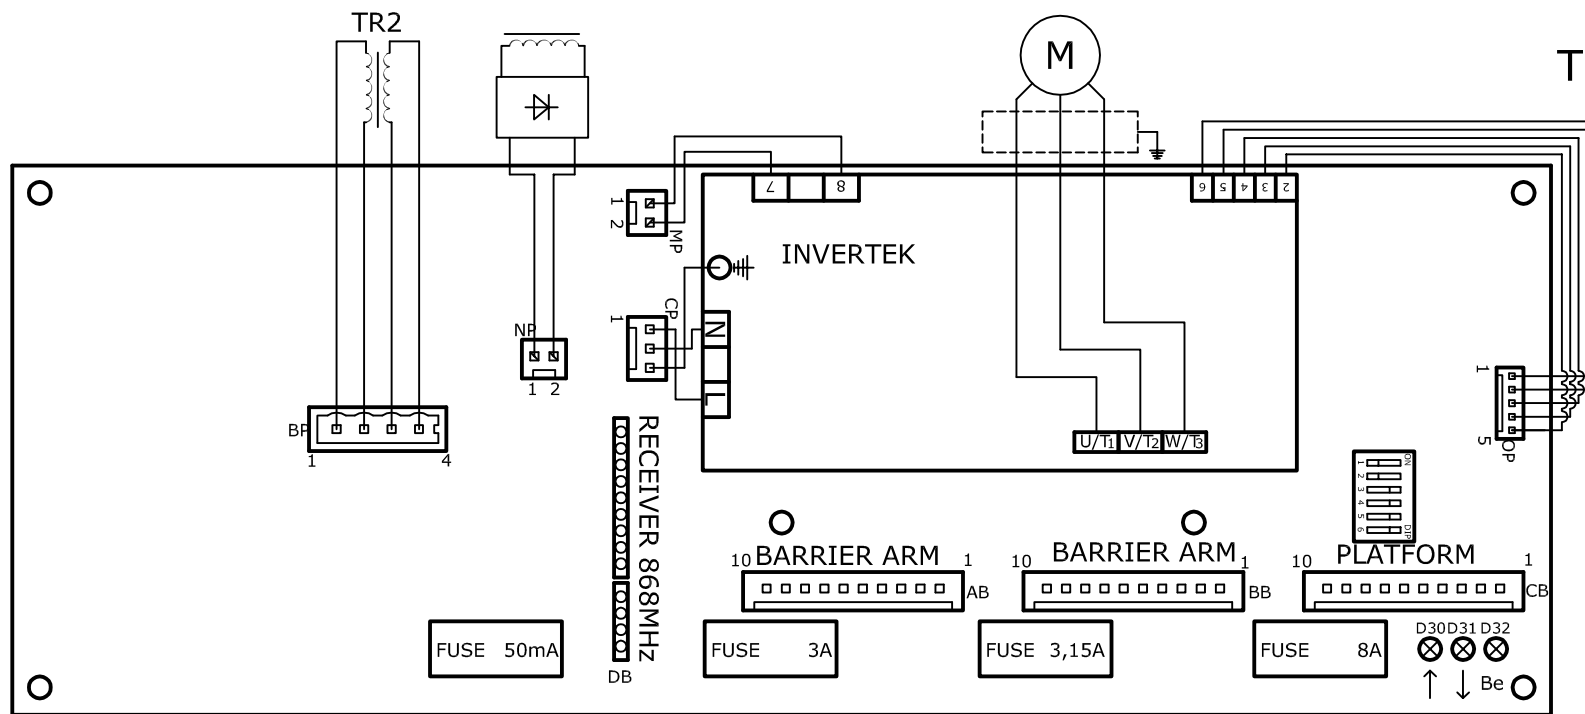

Dip Switch settings	
No:	Description:
1	Flash light On/Off
2	Buzzer On/Off
3	Upper parking On/Off
4	Lower parking On/Off
5	Drive in parking position On/Off
6	Load Cell On/Off

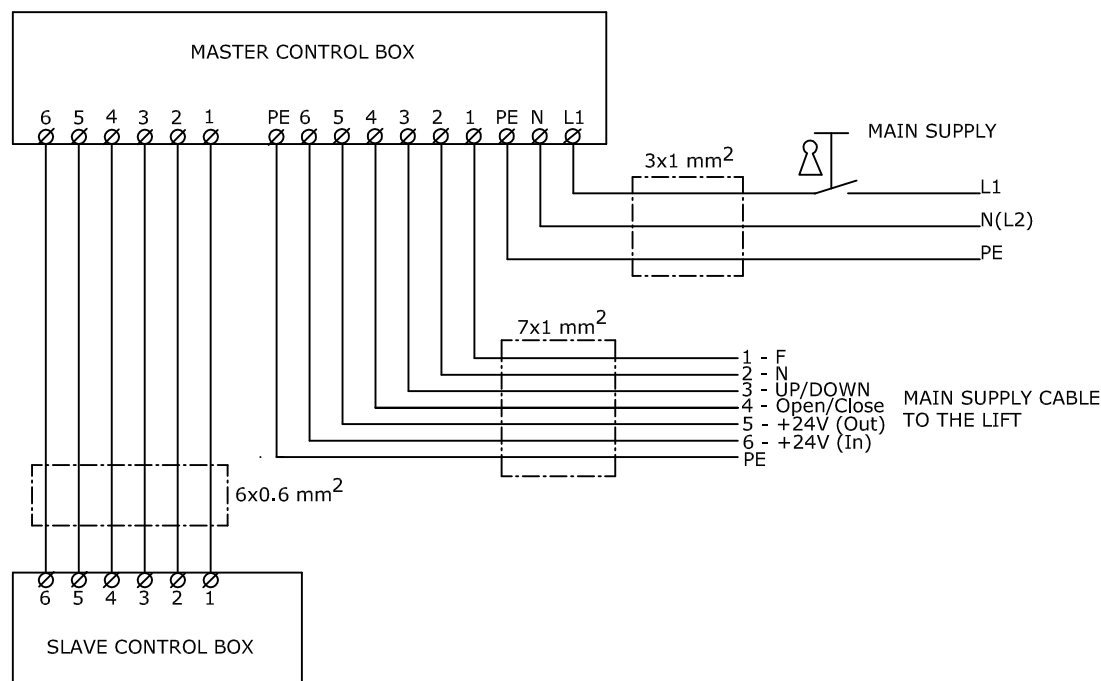

When you install Handi-Lifts type 7 delivered with remote control boxes or remote control only make sure that the main supply cable to the lift has jumped wire number 5 and 6

Red & Green led on ES972A

Red: Error (See cama info 27)
 Green: Power