



HOW TO

Install Bowden-cables on EA9

Table of contents

1	Introduction	3
2	Preparation.	3
2.1	Parts	4
2.2	Tools	4
3	Step by step	5
3.1	Installation of cable for upper and lower ramp	5
3.2	Installation of cable on lifts with side-access-ramp	5


1 Introduction

If you for some reason must the Bowden-cable, the description below is explaining how you must update this system.

2 Preparation.

Before you install the new Bowden-cable please read these instructions carefully. Check that you have all the necessary parts and tools to upgrade the system.

2.1 Parts

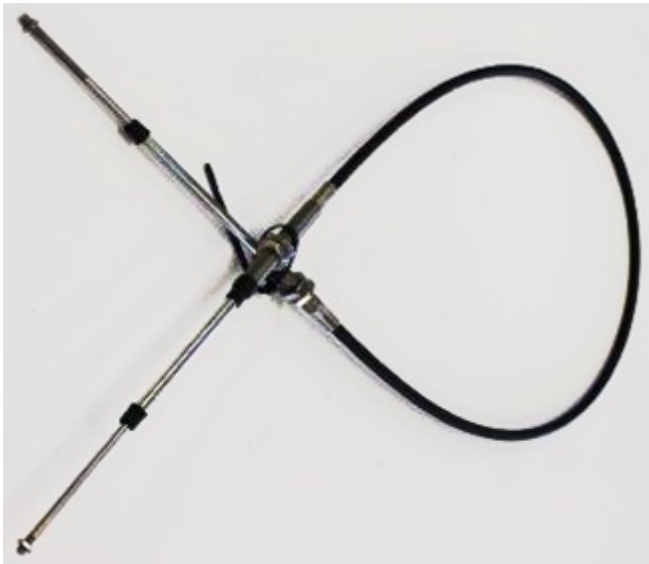

Bowden-cable		
--------------	--	--


2.2 Tools

Locking pliers	Universal key	

3 Step by step

3.1 Installation of cable for upper and lower ramp

Install the cable in the ball head and in the bracket on the frame, as shown on the photos.

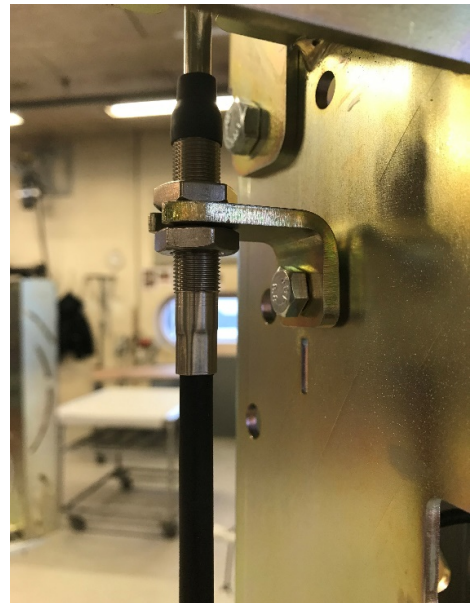

3.2 Installation of cable on lifts with side-access-ramp

Install the cable in the ball head (bend the cable in approx. 23° at the ball head). Make sure that the installation plate is turned 180°.



Turn the bracket 180°. Install the cable in the bracket and pull the cable as far down as possible. Adjust the lower lock nut, so it is situated 3 mm below the bracket.



Push the cable up against the bracket and fasten the upper lock nut.

